


[0.48]  
Ø.188 (3/16) HOLE  
RITCHIE RECOMMENDS  
DRILLING THIS HOLE  
BEFORE CUTTING THE  
LARGE HOLE.

**FWD** BE SURE  $\mathcal{C}$  IS PARALLEL WITH KEEL  
BEFORE INSTALLING

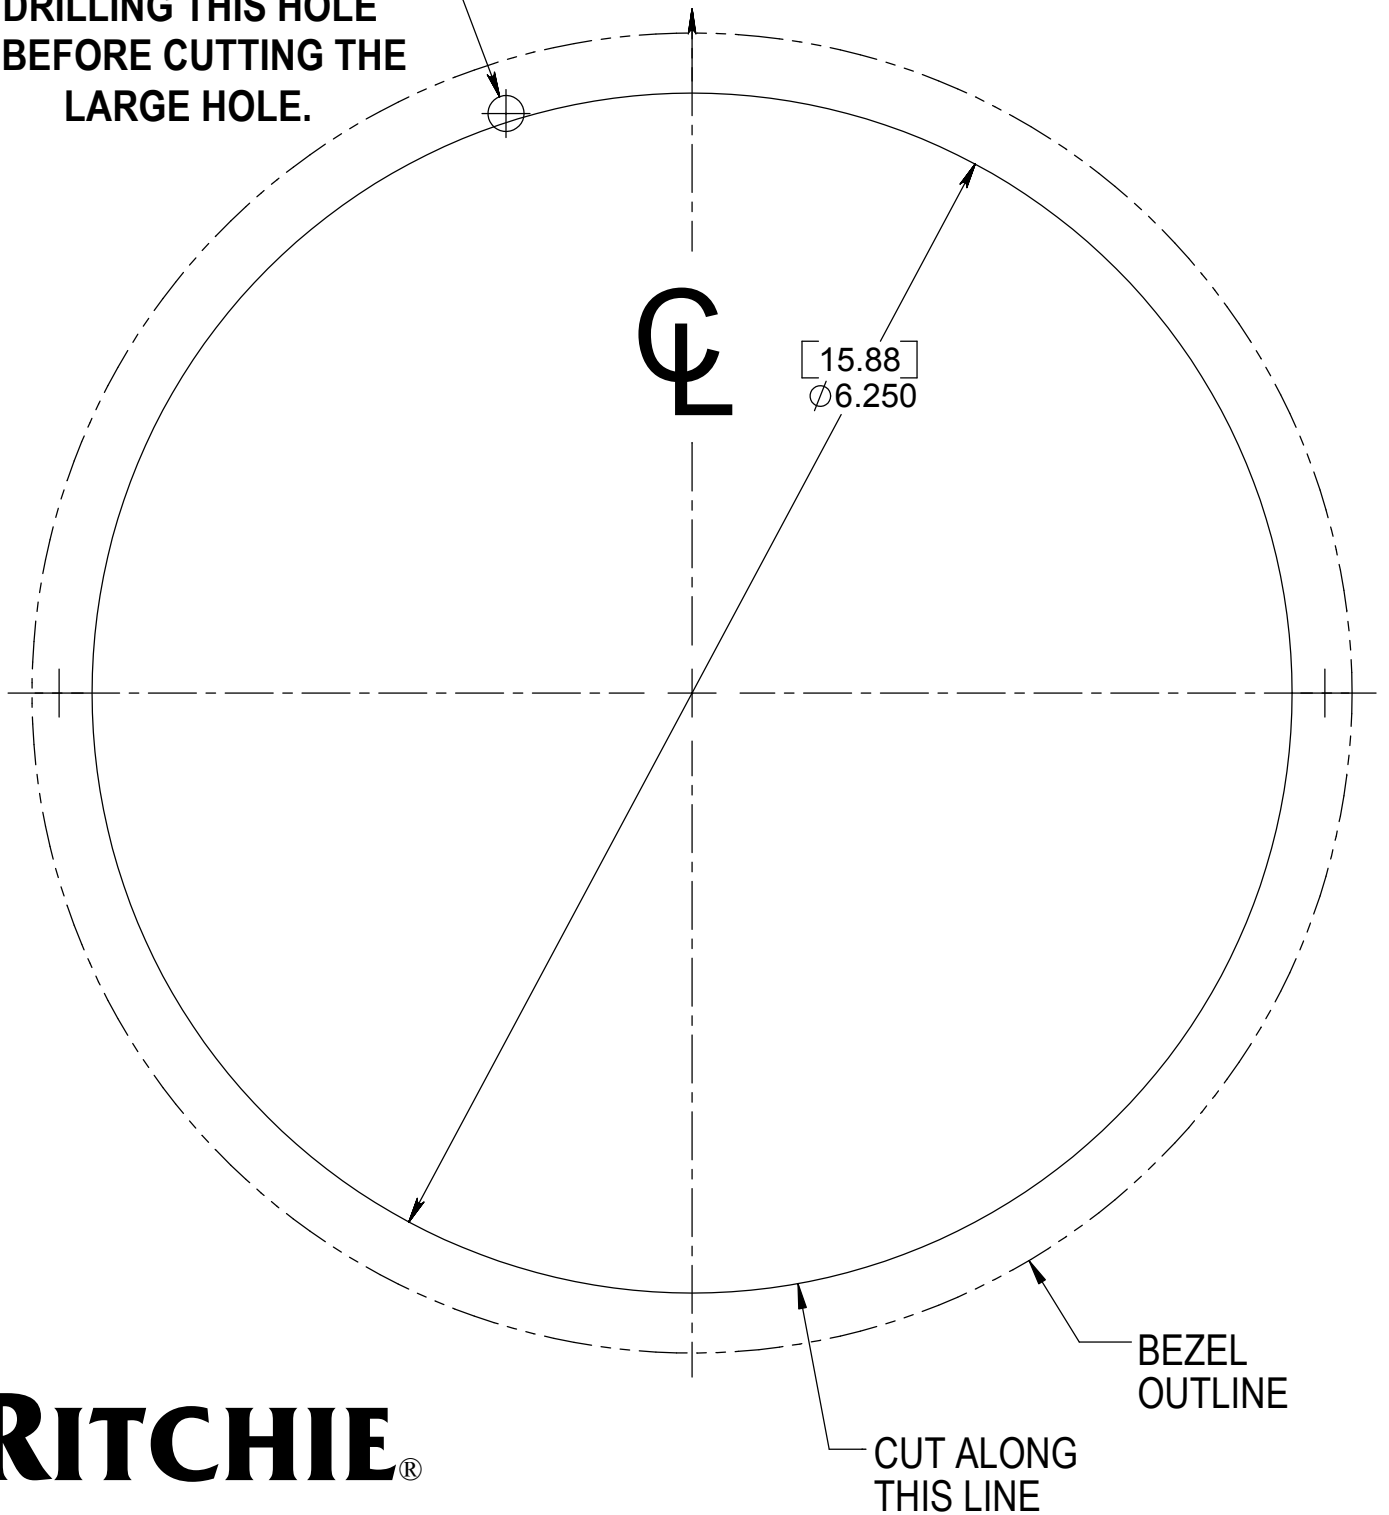

**RITCHIE**<sup>®</sup>

MOUNTING TEMPLATE FOR  
CATALOG No.s B-500, SB-500

Part No. 5G-0103

Drawing Date -- 01/24/86

Revised - 03/12/1998