


RECOMMEND DRILLING  $\phi 3/16"$  [ $\phi .48$ ] LIGHTWIRE  
HOLE BEFORE CUTTING  $\phi 7.25"$  [18.42]

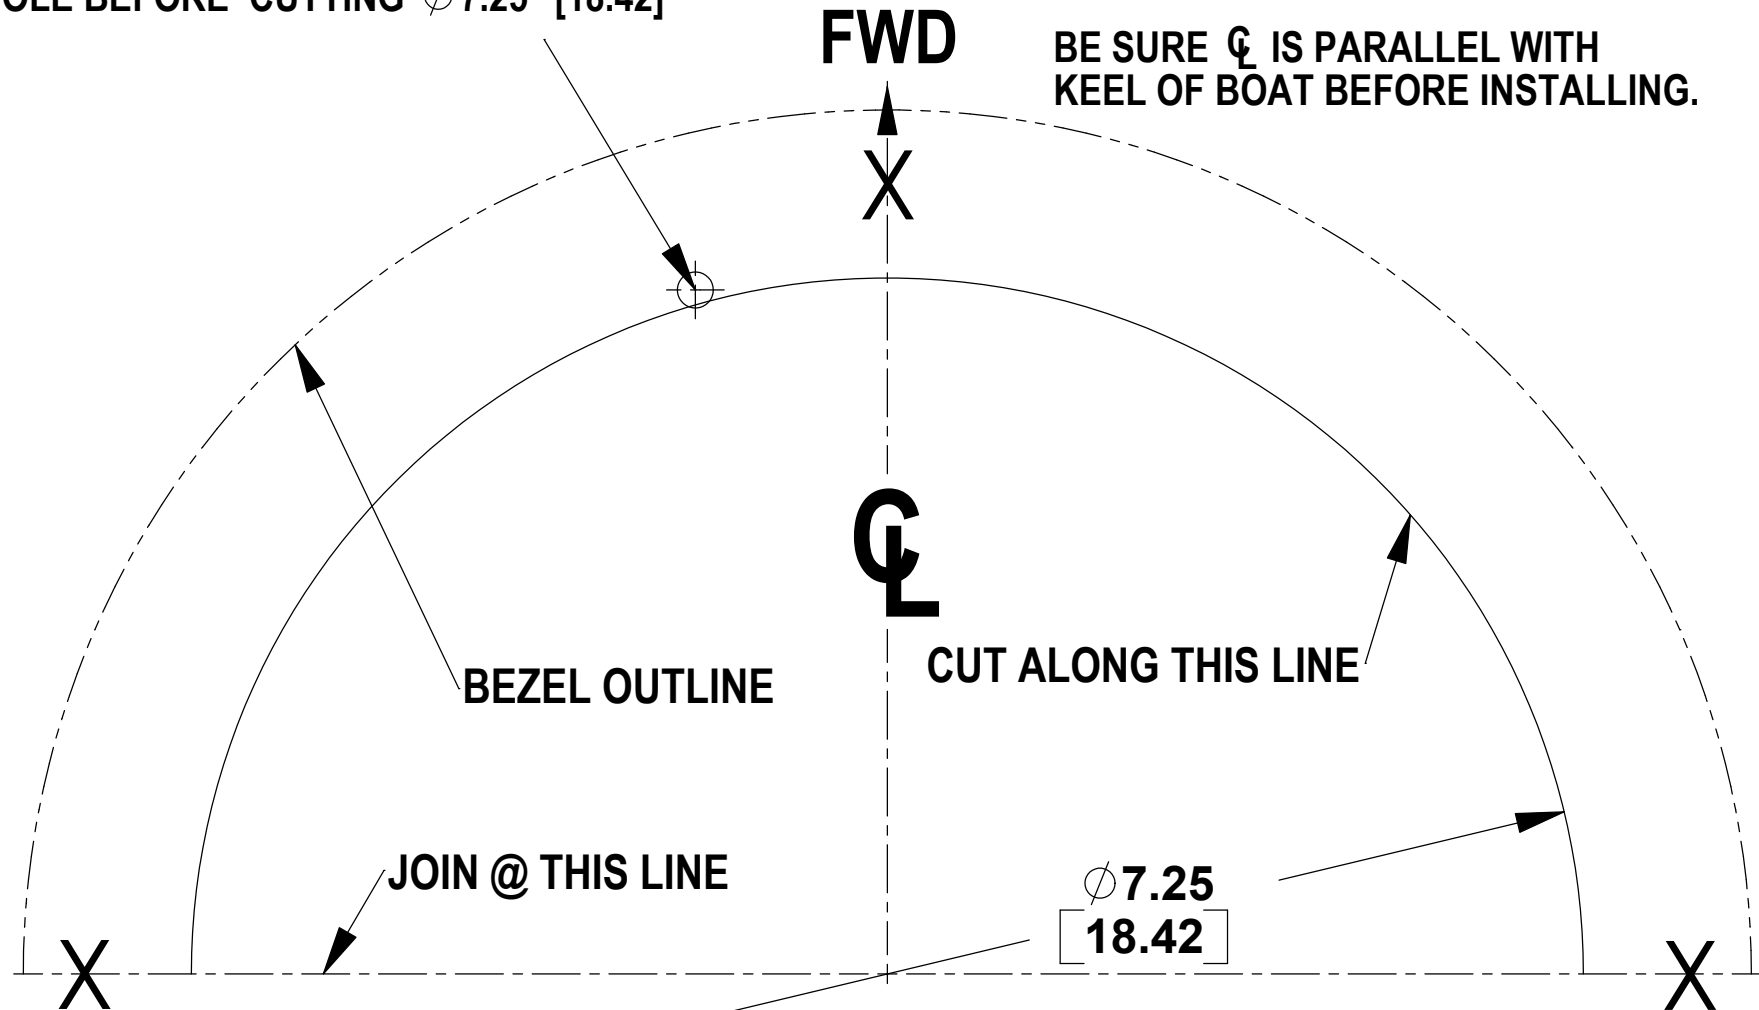

NOTE: THIS IS A HALF TEMPLATE TO FIT ON STANDARD PAPER.  
MAKE TWO (2) COPIES AND JOIN WHERE INDICATED.

**RITCHIE**<sup>®</sup>  
MOUNTING TEMPLATE  
CATALOG Nos. F-600, SF-600

PART No. 6G-0070 REV DATE 3/12/1998