


BE SURE \mathcal{C} IS PARALLEL WITH KEEL OF BOAT BEFORE INSTALLING.

RECOMMEND DRILLING HOLE BEFORE CUTTING LARGE HOLE

0.64
 ϕ .250

15.50
 ϕ 6.104
BC

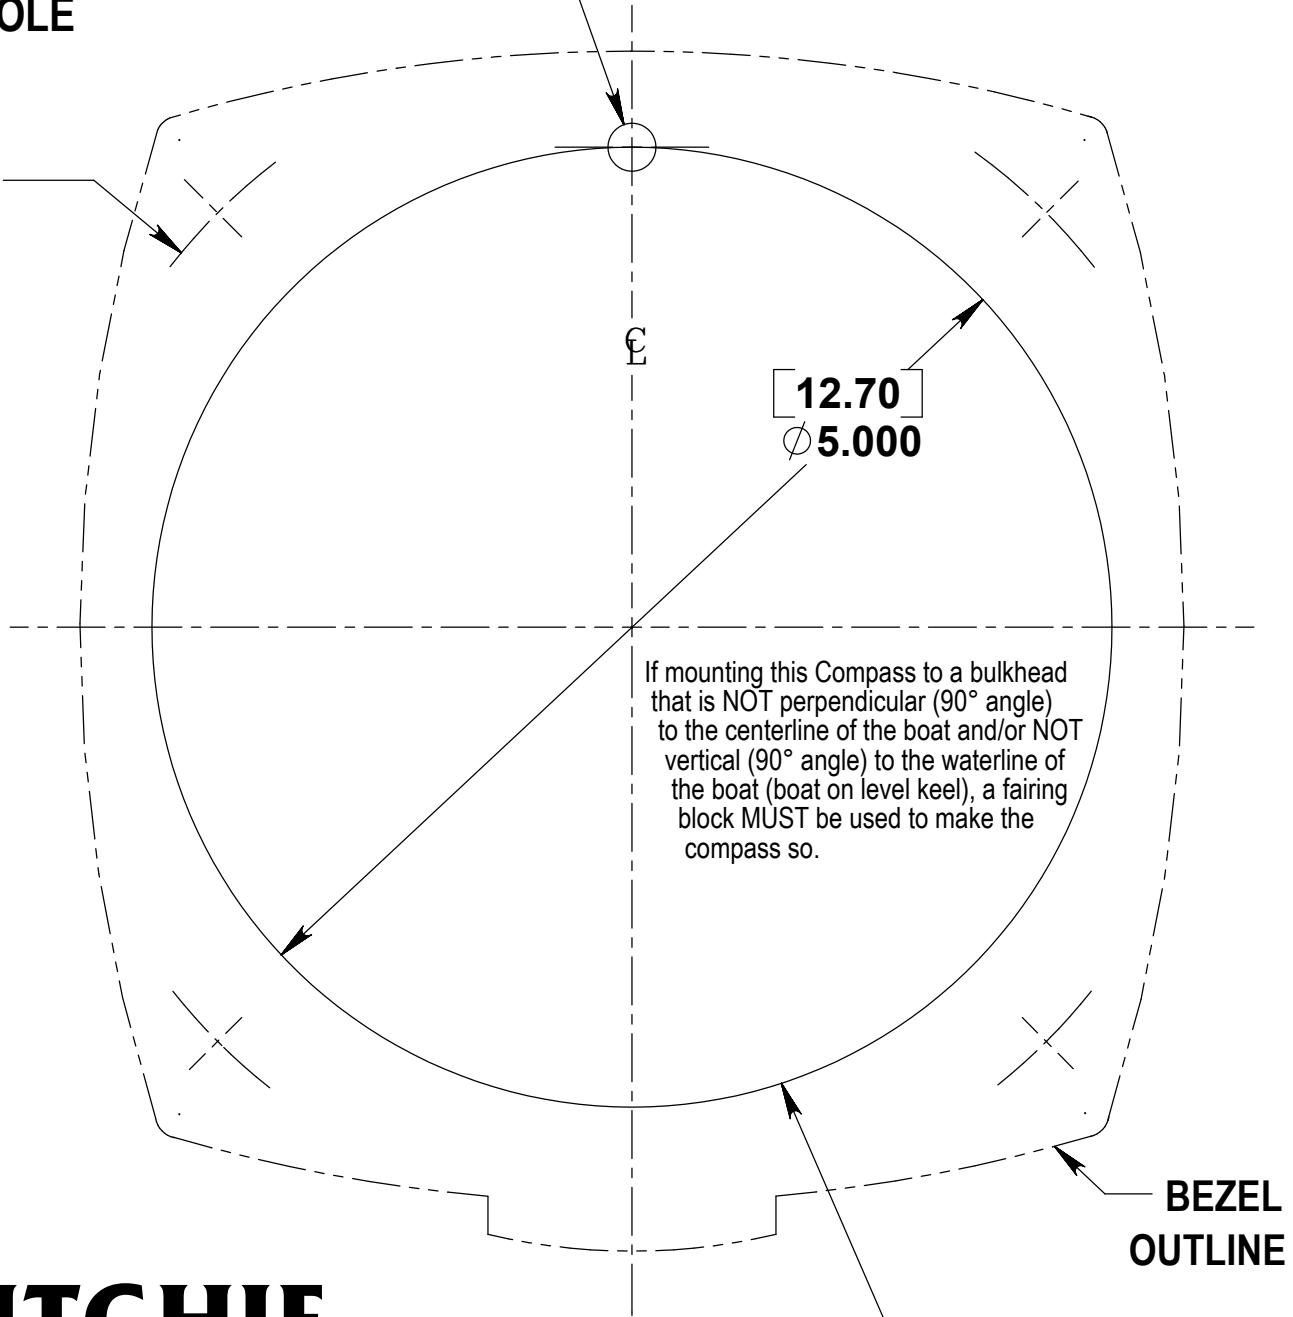

If mounting this Compass to a bulkhead that is NOT perpendicular (90° angle) to the centerline of the boat and/or NOT vertical (90° angle) to the waterline of the boat (boat on level keel), a fairing block MUST be used to make the compass so.

BEZEL
OUTLINE

CUT ALONG
THIS LINE

RITCHIE®

MOUNTING TEMPLATE FOR
CATALOG Nos. HV-76 AND HV-77

PART NO. HL-0093
Rev D, 04/23/1998