


We recommend drilling a 3/16" (4.8mm) hole for the light wire before cutting the mounting hole.

Forward
(Bow)

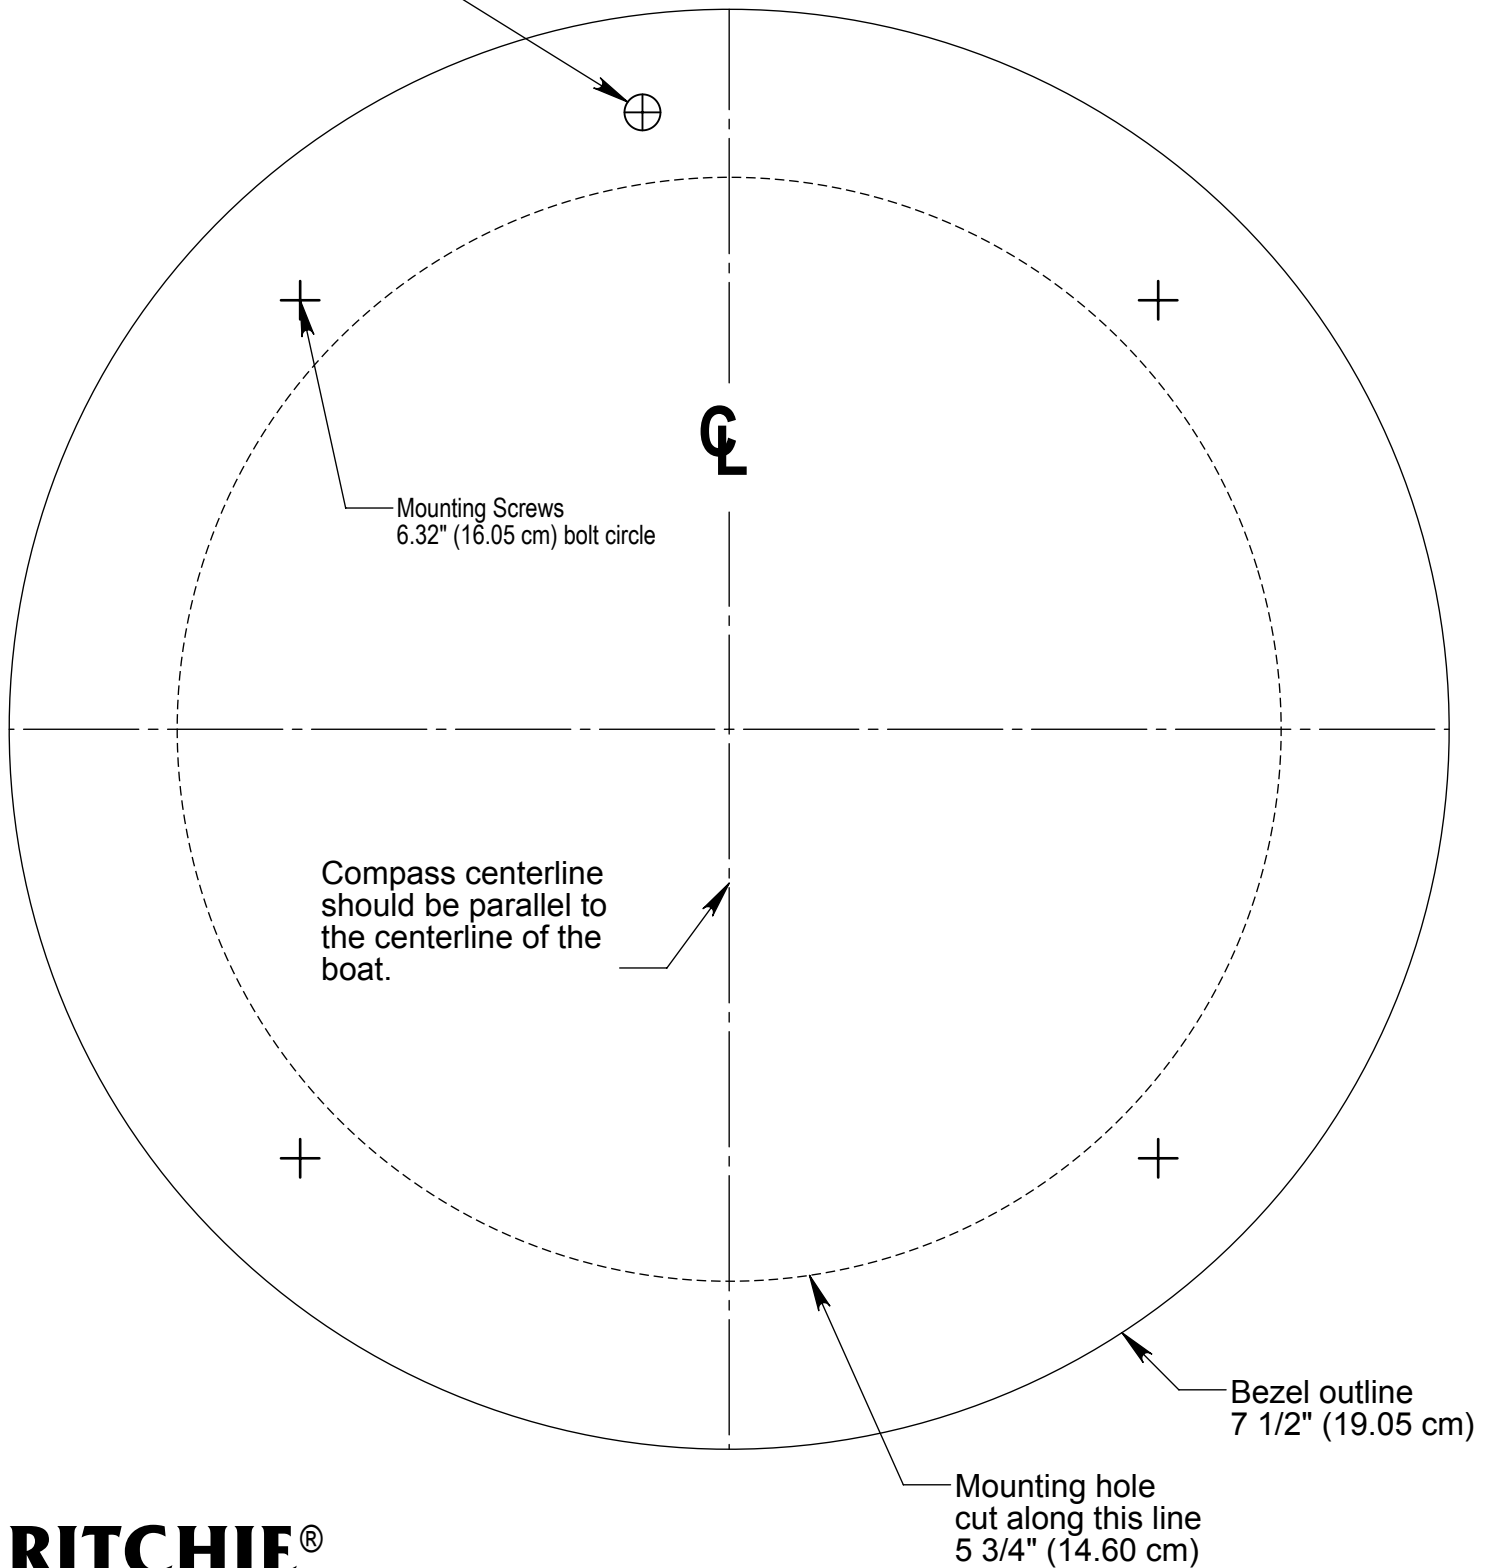

Mounting Screws
6.32" (16.05 cm) bolt circle

Compass centerline
should be parallel to
the centerline of the
boat.

Bezel outline
7 1/2" (19.05 cm)

Mounting hole
cut along this line
5 3/4" (14.60 cm)

RITCHIE®

Mounting Template for
the FD-500

Part # 5G-0107
Rev E 6/10