


We recommend drilling a 3/16" (4.8mm) hole for the Light Wire before cutting the Mounting Hole.

Forward
(Bow)

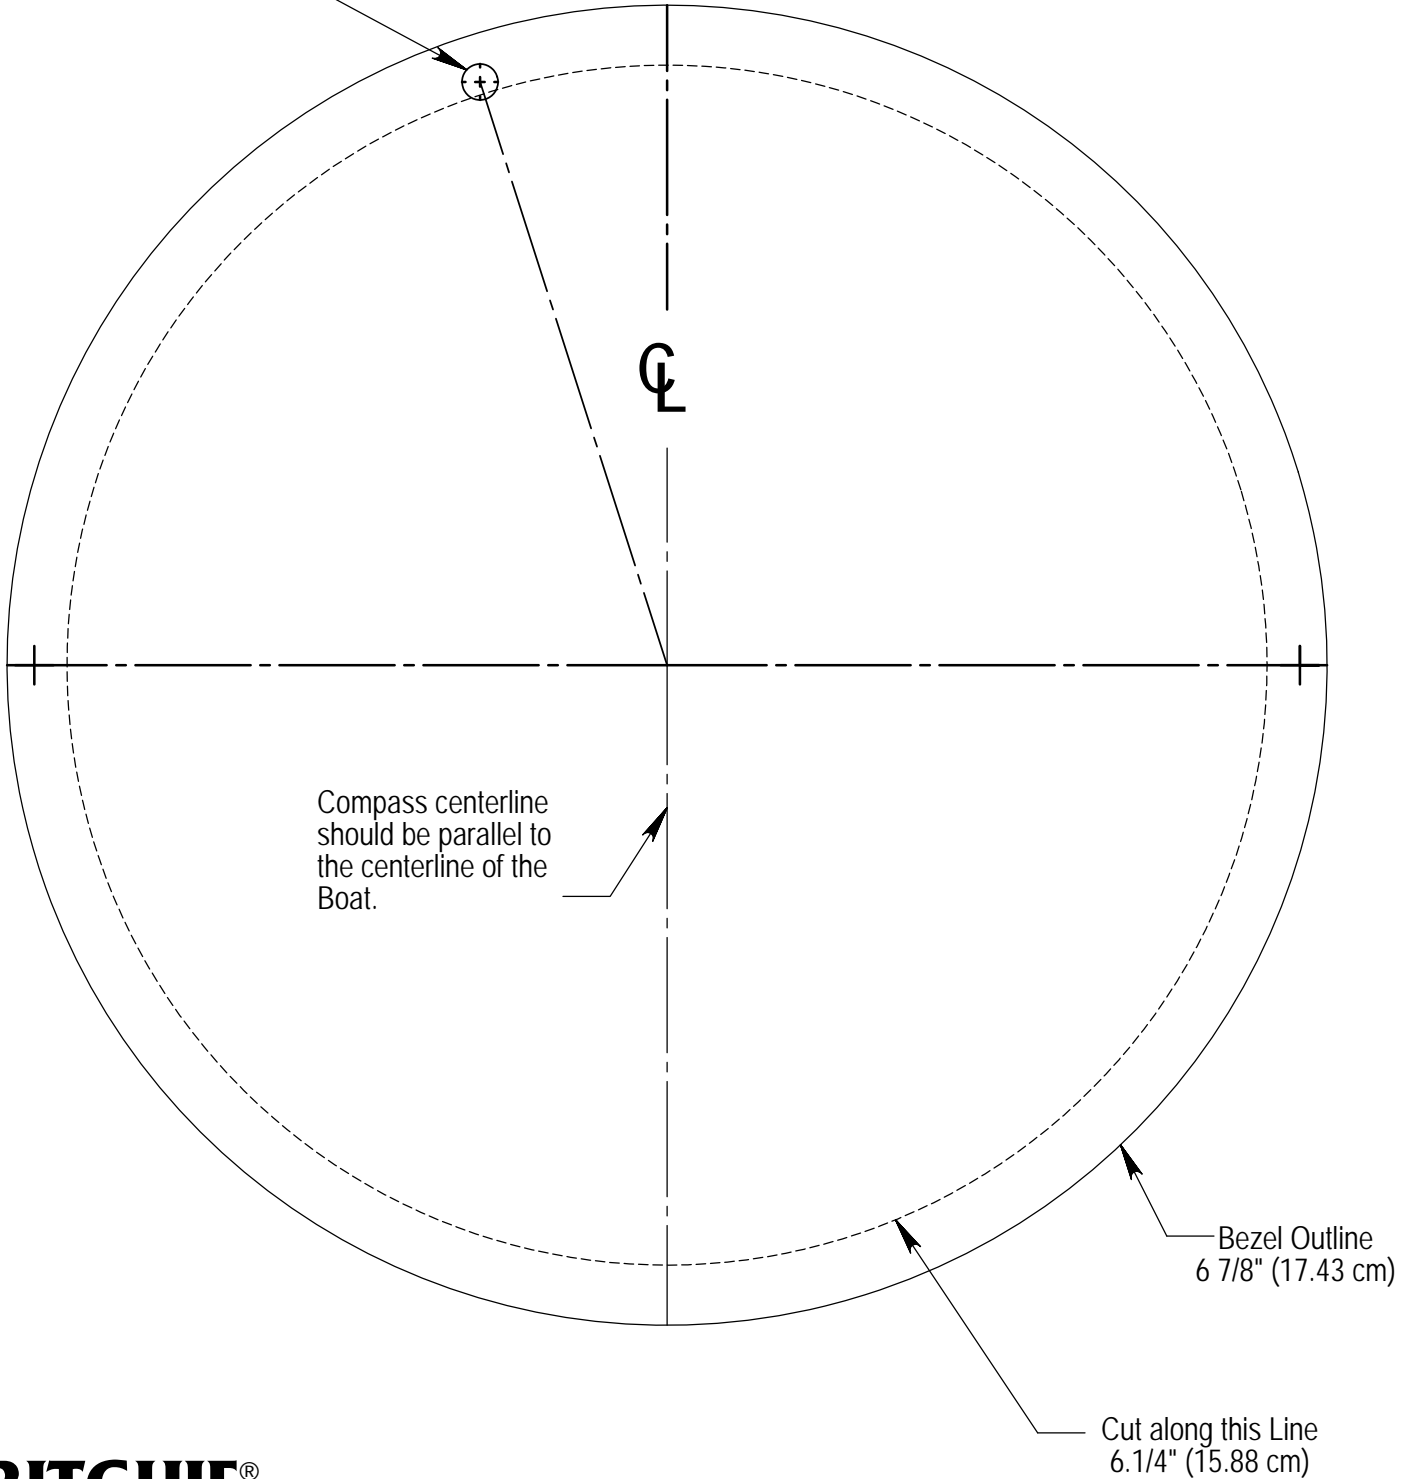

RITCHIE®

Mounting Template for
the B-500, SB-500

Part # 5G-0103
Rev D 6/06