


We recommend drilling a 3/16" (4.8mm) hole for the Light Wire before cutting the Mounting hole

**Forward
(Bow)**

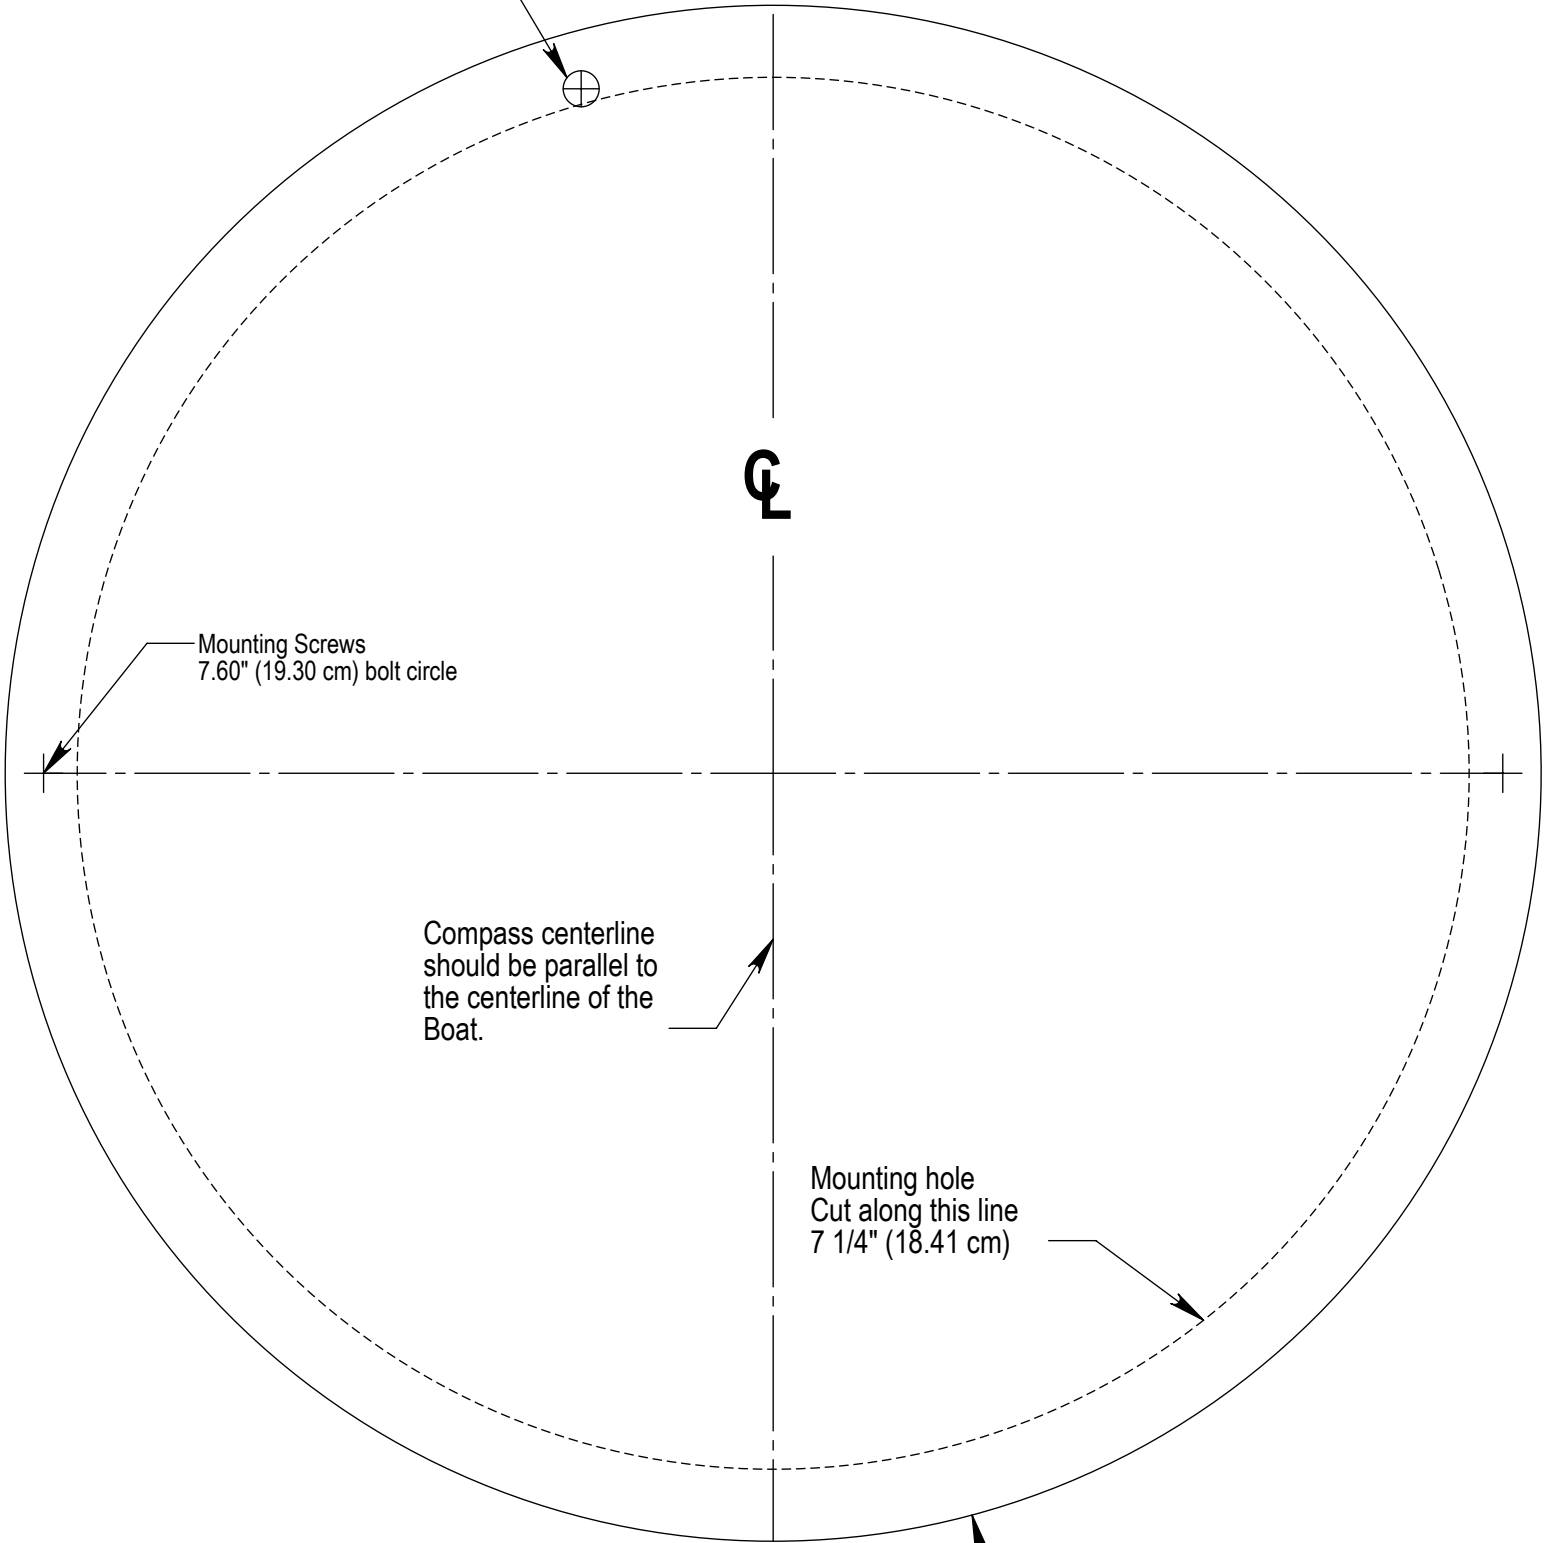

Mounting Screws
7.60" (19.30 cm) bolt circle

Compass centerline
should be parallel to
the centerline of the
Boat.

Mounting hole
Cut along this line
7 1/4" (18.41 cm)

Bezel Outline 8" (20.32 cm)

RITCHIE®

Mounting Template for
the B-600 & SB-600

Part # 6G-0067
Rev A 5/10